



DR 400 & 500
Circuit de freins, roues
Brake system, wheels

<u>FIGURE-Index N°</u>	<u>PART N°</u>	<u>DESCRIPTION</u>	<u>Models affected, remarks</u>
BRAKE SYSTEM			All models (1993?)
224	1	47 26 15 020 Tube sssy, Parking brake valve outlet LH or RH.....	except 500 (see Fig 229)
	2	47 11 37 010 Tube assy, LH or RH wing section.....	" " " " "
	3	75 34 11 010 Union.....	" " " " "
	4	67 11 01 000 Clamp	All models, includ. 500
	5	75 26 22 010 Union.....	" " " "
	6	95 61 11 000 Washer	" " " "
	7	95 21 20 010 Nut.....	" " " "
	8	41 23 56 000 Hose assy.....	" " " "
	9	57 21 14 010 Tubing, plastic spiral protecting	" " " "
	10	62 21 22 200 Tubing, heat-shrinkable.....	" " " "
	11	52 22 12 000 Elbow	" " " "
WHEELS, for main gear & nose gear			400 (1980?)& 500
12	41 23 00 000 Wheel, main gear or nose gear (two half-wheels, with bearings)		
13	42 23 09 020 Bearing, replacement.....		
14	95 13 64 010 Screw		
15	95 61 11 000 Washer		
16	95 24 07 000 Nut, self-locking		
17	41 23 78 020 Disc, brake.....		